




1. Select a location for the ODU

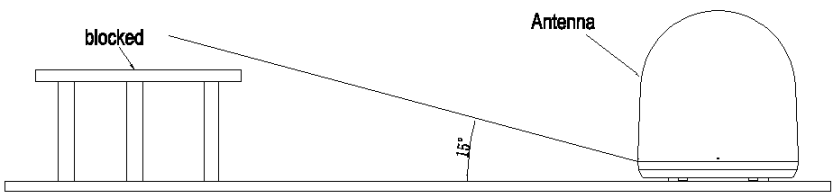


2. Remove Bottom Screw

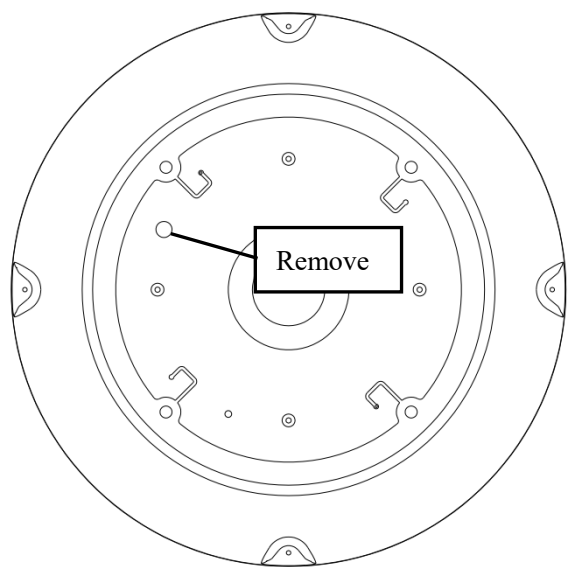

3. Mount the ODU

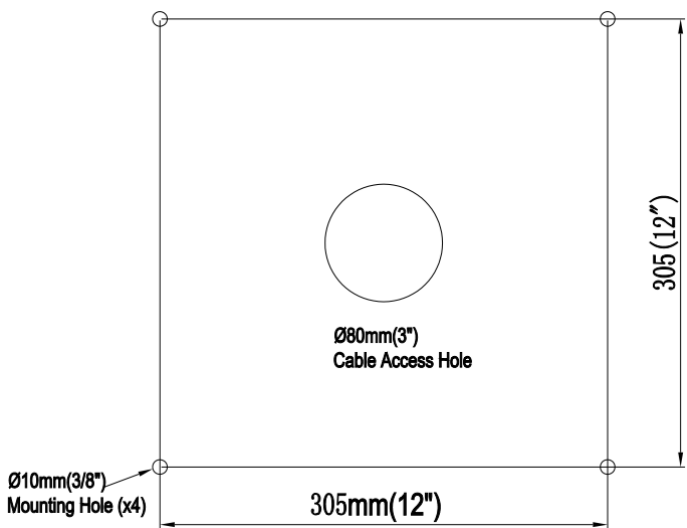


- The antenna requires a clear view of the sky to receive satellite TV, The fewer obstructions, the better the system will perform
- In addition, the antenna should be far away from the mast and radar

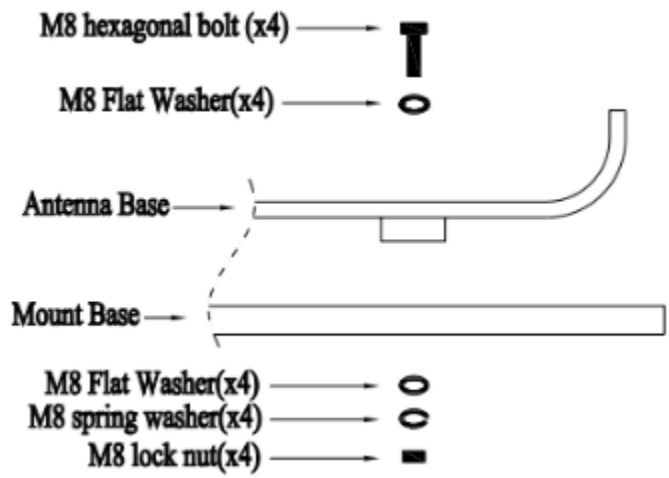

- Secure the antenna to the mount base using bolts, spring washers, and the flat washers, lock nut.

- Remove a hexagon screw at the bottom of base


4. Mount the IDU

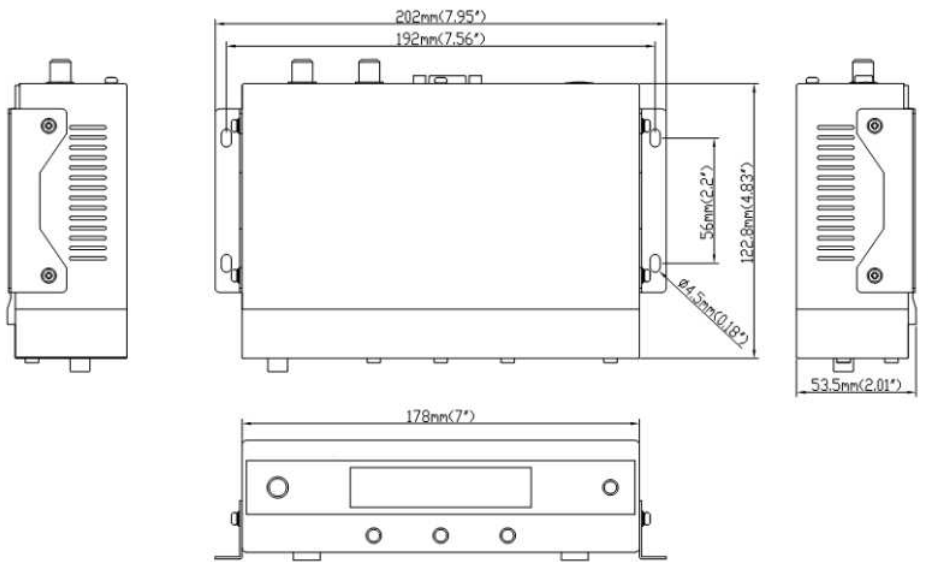


- Dry place is required for IDU to be mounted
- Drill the mounting holes prepare the site for installation.

- Drill the mounting holes and cable access hole to prepare the site for installation

5. Wiring Diagram

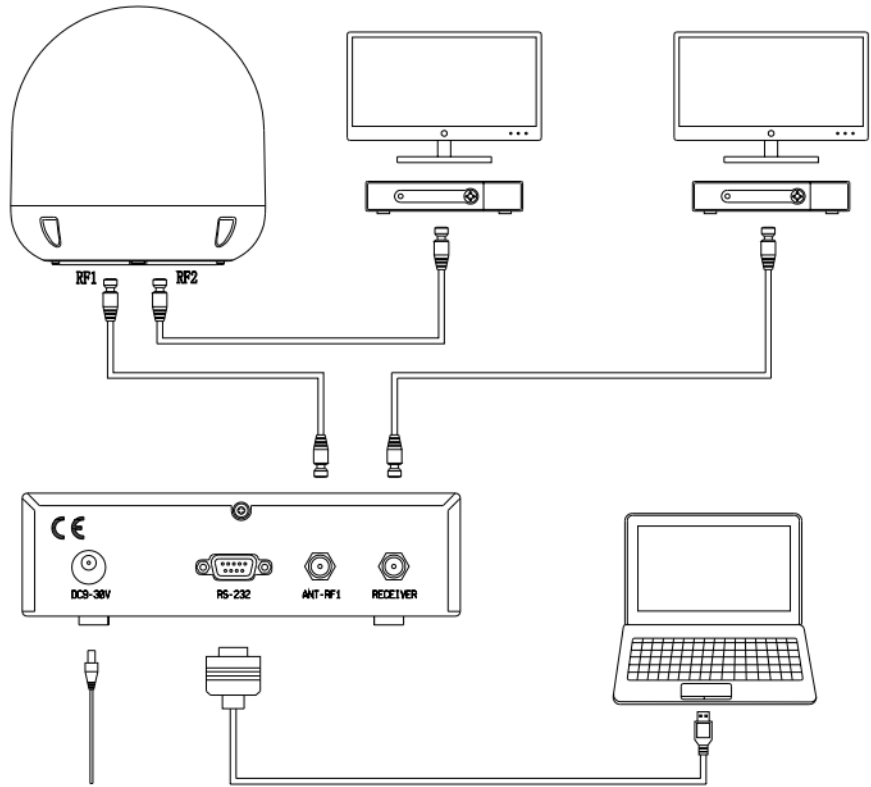


6. Turn on system

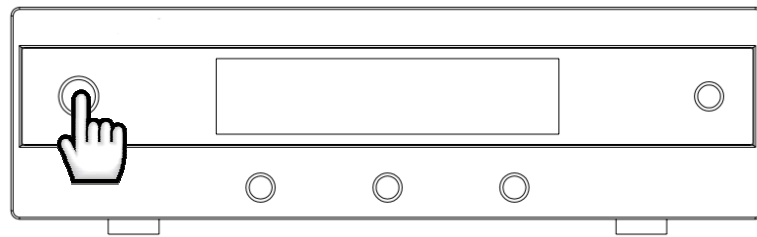


- Turn On Power The antenna system will automatically search and lock onto the target satellite

7. One-button to change the target satellite

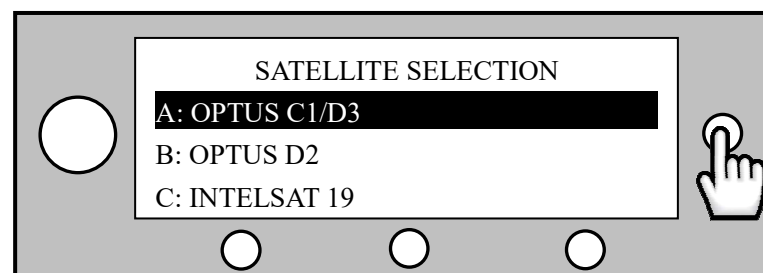

- Press **Function** key can change the target satellite which you want in the list.
- Wait for 3 second, the target satellite will be selected automatically and tracked by the antenna.
- And it will return to **Normal Mode** automatically at the same time.

8. Turn Off System

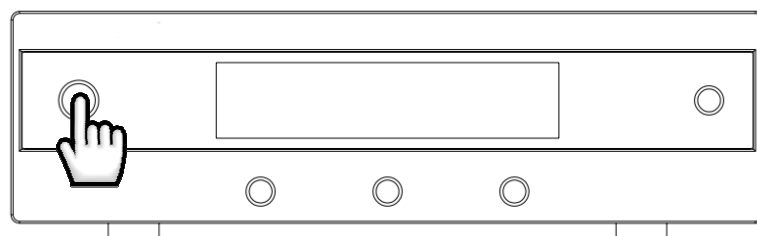

- Press **Power** can turn off the system



MR Marine Electronics Group

Address: 2 Massey Street Gladesville NSW, Australia

<http://www.oceantv.com.au>

sales@oceantv.com.au

Tel: 61-428250520

Contact: Mark Rothwell